SOUND PROMPT SYSTEM

• HIGH SPEED RECYCLING SYSTEM

longer missing the wonderful moments.

• AUTOMATIC SETTINGS SAVING

• PROVIDED WITH EXTERNAL POWER SOCKET

turned off).

14. [Select Dial]

15. Terminal cover

18.PC interface 19.Hot shoe contact

16.Internal power interface

17.Bracket mounting holes

When the sound prompt system is enabled, different sound modes will prompt different working

conditions of the speedlite so as to allow you to focus on shooting process (Note: the sound can be

YN14EX II can automatically save your current operating settings to convenient your next use.

even without using brand new batteries, which will only takes 4~5 seconds.

The recycling time for full output just takes 3 seconds; you can get high speed current-return experience

-31-

Control Unit

YN14EX II is provided with external power socket to meet your higher demand recycling time and no

I.Warning

V.Installation

Slide the [battery cover] in the direction of the arrow. Insert

the batteries according to the label inside battery chamber and make sure the battery polarity direction is correct. Close

Please use four standard specification AA batteries. To avoid circuit please do not use damaged batteries.

Slip the flash (hot shoe stand) into the camera hot shoe stand completely. Rotate

the [fixed knob] to the right in the direction of the arrow until one "click" sound.


the [battery cover] in the direction of the arrow.

1. Battery Installation

- *To avoid fire or electrical shock, do not expose this product to rain or moisture *To avoid short circuit, please sure the batteries contacts are securely packed and in accordance with local
- provisions when handling the battery. *Please place the batteries and the parts which can be swallowed mistakenly away from children. Contact
- a doctor immediately when it occurs. *To avoid possible injury to eyes, do not use the flash light in a short distance from the eyes.
- *To avoid possible safety accident, do not use the flash light on the people who need a high degree of
- Please take out the batteries and stop using immediately in case of below: *This product is dropped or shocked seriously and the inner part of the product is bared.
- *If the battery leaks corrosive liquids, please take out the battery with gloves. *The product gives off strange smell, heats or smokes. *Do not disassemble or maintain this product. Touching the internal high voltage circuit will cause

electric shock. *Please take out all the batteries if not use this product for a long time.

-29-

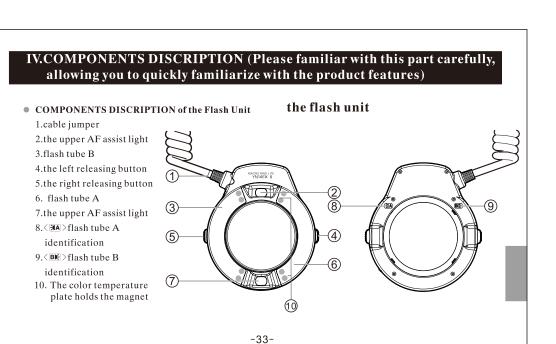



1.Connecting cable

13. Fix release button

II.Features

Macro Flash

SUPPORTS MASTER TTL FLASH

LARGE-SIZE LCD DISPLAY

LED AF ASSIST LIGHT

shadow on the subject to make the photo with engraving effect.

High brightness LED focus assist light to allow focus more easily.

Supports the lens of the following filter size: 52mm, 58mm, 67mm, 72mm.

visually, which will be more convenient for use.

synchronous flash by using PC synchronous line.

• SUPPORT THE LENS OF MULTIPLE FILTER SIZE

• EQUIPPED WITH PC SYNC INTERFACE

2.LCD display 3. 【RATIO】:short press to set the flash ratio,long press for two second to enter into the front-curtain or rear curtain synchronous flash switch. 4.Backlight/sound switch []: short press the button to turned on or off LED backlight; and sound prompt function of the speedlite shall be turned on or off by pressing this button for about 2 seconds.

5. Flash mode button [MODE]: short press the button, the flash mode will switch between TTL and M. 6. Charge indicator/[4] Test button: Green lamp indicates charging is completed and the flash can work; green lamp indicates charging is being on, and press this button the speedlite will make test flash. 7. **[**SEL/SET **]** button: Save the setting


Supports Exposure Compensation, FEB, Rear-curtain sync, FE lock, Modeling Light, Canon camera

Supports flash ratio, and the flash tube A and B can adjusted together or individually, which can creates

Equipped with large-size LCD display, the flashing function can be checked and set more clearly and

YN14EX II is equipped with standard PC synchronous interface which allows you convenient to use


8. Dust-proof waterproof adapter 9.【▲.LED】:Turn on the above side AF assist light 10.**[**LED.**▼**]: Turn on the below side AF assist light, long press to enter the Custom mode Fn 11. 【LOCK】Lock switch/Power switch 12. Lock release button

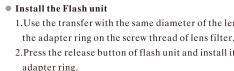



※ The macro flash is designed for macro lens, so the lens may turned when the non-macro lens focusing. It is recommended use manual focus (MF) when using the non-macro lens. ▲ Auto focus may damage your lens.

3. Color Temperature Filters


replace it and it can be used by putting in front of the lamp shell and absorbed by the magnet.

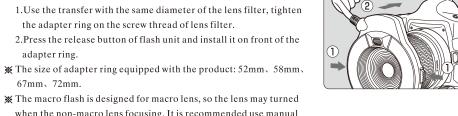

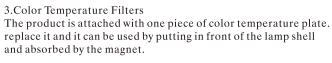

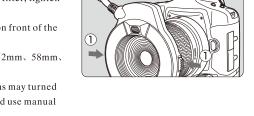


Handling Method

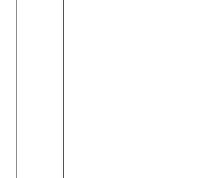

VI.Basic Operation 1.Backlight/Sound button [5/5]: short press the button to turn

on/off the LCD backlight; and press the button for about 2 seconds turn on/off the sound prompt function.



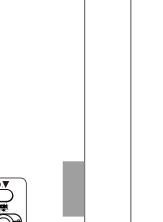

III.Quick Guide


Please read this section to if you do not have time to browse the whole manual. 1. Please avoid the excessive use of the output with maximum power. It can effectively extend the service


(It is recommended that the speedlite should be idled for more than 5 minutes when entering the overheating protection.) 2. You can operate the respective buttons and observe the changes of the displayed content to understand

their respective functions. 3.Short press the [\$\frac{1}{2}\frac{1}{2}\] button to turn on the screen background light, long press the [\$\frac{1}{2}\frac{1}{2}\] button to turn on/off the SOUND PROMPT; short press the [MODE] button to switch mode TTL/M mode; short press the 【RATIO/DDD】 button to enter the setting of flash ratio, long press the 【RATIO/DDD】 button to switch the front/rear-curtain sync; Short press the 【△.LED】 and LED.▼ 1 to turn on or turn off the AF assist lamp, long press the 【LED.▼】 to enter into the Custom function settings.


4. Through rotate the Select Dial the flash parameter can be adjusted rapidly in the current mode, some parameters need to press the [SEL/SET] button to set.

-32-

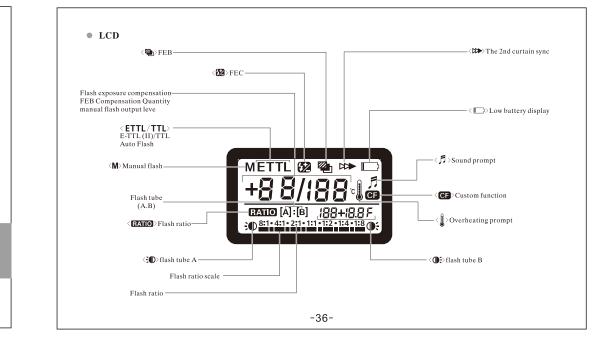

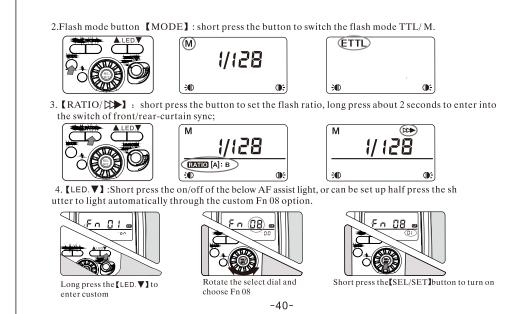



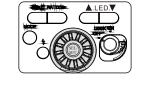

3. Take down the flash before disassemble the flash

please keep pressing the [lock release] button and


slip the [fixed knob] to the left at the same time, and

6. Charging Indicator/Test button [4]: the red light indicates fully charged and can be used; the blue light indicates in the charging state. The flash will make testing flash when pressing the button [4].

will display current parameter when use this function.

7.Turn on and turn off the [Switch] and lock function: Dial the [Switch] to the position <ON>, the flash will turn on and start charging, dial to the position <OFF>, the flash will turn off. Turn on the flash and dial to the position <LOCK> will enter into lock function; use the function can prevent the parameters being changed accidentally. The screen

-41-

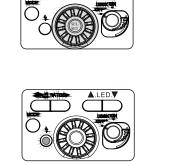

Meaning of [Charging indicator]	1
Statues of [Charging Indicator]	

The red light on	The speedlite is fully charged and can be used.	Normal
The blue light on	The speedlite has not been fully charged.	Waiting for completion of charging.
Blinking blue light	Low battery and the speedlite is about to shut down.	Please renew the batteries.
The meaning of 【Sound Prompt】		
The Sound Form	Meaning	Handling Method
Tick twice	The sound indicator is enabled, the flash is started.	Normal
Tick-tick Tick-tick twine	a.The speedlite is in charging; b.Overheating protection state.	Waiting for complete charging; or Idle 3-5 minutes for overheating
	F	protection remove.
Tick-a long sound	The flash is fully charged, and can be used.	protection remove. Normal

Power on /off

1.Dial the [Switch] to the position <ON> to turn on the flash, can be set flash switch through the custom setting, turn off the flash power and then remove the battery. 2. After turning on the flash, the [charging indicator] is on red light, which indicates the flash is ready to work. 3. When in low battery, if the charging is not completed within 20 seconds, the

[Charging indicator] will blink with blue light; the LCD panel will displays the icon of low battery, and the flash will auto power-off, indicating it need to replace new batteries. 4. You can press the [4] button to test if the speedlite works normally.

5. After use, slip the [Switch] to the <OFF>position.

It can be set the flash exposure compensation like setting common

1. Press the [select dial] button, can be regulated the flash

exposure compensation with the precision of 1/3 EV within the

2. If you want to cancel the exposure compensation, set it to "0",

The camera with the precision of 1/3 EV in range of ± 3 EV and

 $automatically\ bracket\ exposure\ to\ continue\ shooting\ 3\ photos,$

ETTL Mode

• < 52 > Flash exposure compensation

the screen does not show \in 22 > icon.

■ < **P** > FEB Flash Bracket Exposure

which is called flash bracket exposure.

1.In ETTL mode, the metering system of this camera will detect the flash illumination reflected back from the object so as to automatically adjust the flash output. Supports exposure compensation, FEB, Rear-curtain sync, AE lock, and CANON camera menu access and etc. 2. You can set the exposure compensation for flash by short press the [SEL/SET] button and then rotate the [Select dial] for adjustment. The flash exposure compensation amount can be set up within the range of ±3EV in 1/3-stop precision.

The color temperature plate can be used

when it is attracted by the magnet

• < Set the Flash Ratio

It can adjusts the flash ratio of tube A and B or just make one flash tube work. It can creates shadow on the subject to make the photo with engraving effect. The flash ratio can be regulated with the precision of 1/2 EV within the range of 8:1—1:1—1:8. 1.Press the 【MODE】 button to ETTL mode.

2.Press the 【RATIO/► button to display RATIO A: B>

3. Set the flash ratio, rotate the [Select dial] to choose the value from 8:1—1:1—1:8. When





-44-

4. The A tube lit when only show $\langle \mathfrak{P} \rangle$, while the B tube lit when only show $\langle \mathfrak{P} \rangle$. RATIO A : B 5.In flash ratio mode, press the [SEL/SET] button to switch the flash exposure compensation adjustment. If without operation for 10 minutes, it will automatically return to the flash ratio regulation mode, or press the [SEL/SET] button to return the flash ratio regulation.

➤ Due to the automatic exposure control, there is no need to calculate the exposure **※** If the speedlite in ⟨M⟩mode, please refer to the < M Manual flash exposure > section.. **※** If taking photo without display ⟨**RATIO** A:B⟩, the flash tube A and B will transmit the flash with same flash output. -45-

 M Manual Exposure in one EV as increment manually

You can set the flash output between full out 1/1 and 1/128 You can use one of the following three ways to make the flash work: Method 1, A and B with the same flash output. 1. Press the 【MODE】 button to M mode. 2. Rotate the [Select dialn] to adjust the output power.

Method 2, A and B with different flash output. 1.Press the 【MODE】 button to M mode. 2.Short press the 【RATIO/► button to display the ⟨RATIO A: B⟩ 3. Press the [SEL/SET] button can switch the output power of A/B tubes.

4. Rotate the [Select dialn] to adjust the output power.

utput power of tube A 1/ 128 RATIO A :[B] + [].]

-49-

FEL Flash Exposure Lock.

Method 3, Only A or B flash

O FF

Rotate the [Select dial] until the

C.Fn Set the Custom Function

YN14EX II according to your preferences.

Using the custom function, you can set the custom function of

1. Long press the 【LED. ▼】 button, enter into C.Fn mode.

RATIO [A] B

Use FEL flash exposure lock, you can lock the correct flash exposure readings for any part of the scene. Press the <FEL> button when the LCD displays <ETTL> (please press the <*> button if without the <FEL> button in the camera.) 1. Focus on the subject and press the <FEL>button, YN14EX II will fire pre-flash and will keep the flash output which the subject need in internal storage, FEL will display 0.5 second on the viewfinder. 2. Every time pressing the 〈FEL〉 button, the flash will fire pre-flash and upgrade the flash exposure

※ If the subject is too far away, it will causes underexposure, the ⟨♦⟩ icon will blink on the viewfinder. ₩ Please close to the subject and then try to use the Flash Exposure Lock. ¥ If the LCD is not display <ETTL>, it could not set the flash exposure lock.

¥ If the subject too small, the flash exposure lock may not with sufficient effect.

-46-

1.Base on the method 2,rotate the [Select dial] to 1/128, displays OFF and the tube will be turned off.


2. Press the [SEL/SET] button, switch to the other flash tube, then the output power can be adjusted separately.

-50-


1/128

Press the [SEL/SET] button, switch

1.Press the 【MODE】 button to ETTL mode. 2.Long press the [SEL/SET] button, rotate the [Select dial] will display Fb-0.3/Fb-0.7/Fb-1.0 Fb-3.0, can be set the exposure bracketing as needed. 3.It can be set the subsequence of Bracket Exposure through custom setting option Fn 04,"00"/"01". -47-

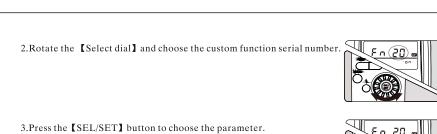

4. Press the 【LED. ▼】 button for save and exit.

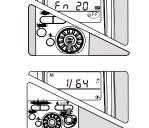

● 〈▷⋙>The second curtain sync	METTL	
☀ After taking 3 photos, the Bracket Exposure will be cancel automatically.		
according to the flash exposure compensation.		
₩ When use the bracket exposure together with flash exposure compensation	, FEB will take	e photo
make sure the preparation of flash.		

¥ In the process of bracket exposure, please set the camera's driving mode to single shoot. And please

Use slow shutter, you can create a light trails behind the subject. The speedlite will flash on the moment of shutter closing.

1.Enable the second curtain sync, press the 【RATIO/► button for about 2 seconds until the icon ⟨►►► shown. 2. Cancel the second curtain sync, press the 【RATIO/₩▶】 button for about 2 seconds until the icon ⟨►►► vanish. * the camera's "BULB" mode is suitable for use with the second

-48-

C.Fn Number Function and Setup Instructions on: turn on the power saving function Fn 01 on/off off: turn off the power saving function on: FEB auto cancel is enabled Fn 03 on/off off: FEB auto cancel is disabled 00: Sequence of FEB is $:0 \rightarrow - \rightarrow +$ Fn 04 00/01 01: Sequence of FEB is: $\rightarrow 0 \rightarrow +$ 00:Half press to enable AF-assist beam is turned off 01:Half-pressed to turn on I level brightness of the focus lamp 02:Half-pressed to turn on II level brightness of the focus lamp Fn 08 00/01/02 on:Sound prompt function is enabled Fn 20 off:Sound prompt function is disabled 3/05/10/60 indicates the dormancy mode enabled after the flash keeping idle for 3/5/10/60 minutes. In Off/03/05/10/30/60 Fn E1 dormancy mode, it will power off automatically, after keeps the same idle time.OFF indicates NO dormancy

-52-

and will not turn off.

C.Fn	Number	Function and Setup Instructions
Fn E2	on/off	The display time of LCD backlight is 7/15/30 seconds Keep bright until pressing the button to turn off it.
Fn E3	07/15/30/ Off	on: recover the default settings off::no-operation (default)

₩ Fn 01-Fn 20 options are consistent with the options on Canon camera menu.YN14EX II can be set through ₩ Fn E1-Fn E3 can only set on YN14EX II.

-53-

	VII To a blank and a	1.	
	VI.Troubleshooting	guide	
	Fault	Cause	Handling Method
	The flash does not work.	The control unit has not firmly	Push the hot shoe of control unit in
		installed in the camera.	position and rotate the screw.
		The electronic contact of control unit or	Class the anatast
		the camera's hot shoe become dirty.	Clean the contact.
		The control unit without battery.	Install the battery in the control unit.
		The batteries have ran out.	Replace a new set of batteries.
	Underexposure or	Have set the flash exposure	Cancel the flash exposure
	overexposure.	compensation.	compensation.
	The power shut down	power shut down Enter into C.Fn 01 to set "off", at 1	Enter into C.Fn 01 to set "off", at the
	automatically.	Set the power saving function moment the setting of Fn E1	
	Unable to remove the control	The fixed knob has not screwed to the	Screw the fixed knob to the top and ther

top. 💥 Any problem in using please refer to this section or browse the manual again. If the problem failed to resolved to the after-sales service center.

-54-

Specification	Macro Ring Flash Flash YN14EX II	Туре	Automatic annular flash for macro shots
Circuit Design	Insulated Gate Bipolar Transistor	Guide No.	18 (ISO 100 in meters)
Flash Coverage	Vertical rotation angle about 80°/ Horizontal rotation angle about 80°	Flash Ratio Control	With the precision of 1/2 EV within the range of 8:1—1:1—1:8.
Flash Mode	TTL,M	Power Supply	4 AA alkaline battery or AA Nickelmetal hydride battery (Ni-MH)
Lighting Times	200-2500 times	Recycle time	approx 3s
Color Temperature	5600k	Flash Control	8 levels of output control(1/128~1/1),22 levels of fin tuning
External Interface	shoe, PC port and external charging port	Control Unit Dimension	175*105*160mm
Flash Unit Dimension	135*123*26mm	Net Weight	920g
Additional features: Fl	ash ratio control, rear-curtain syn	c,LED AF Assist Lam	p,exposure compensation, FE
	,automatically saving setting,PC p ,advanced options function	ort, charging interfac	e,power saving Mode,
Accessories: Annular N	Macro Flash (1), protecting bag (1) ,manual (1) , adap	ter ring (4), CT filters(4)
	-55	_	

-51-

Update version of this manual can be got form http://www.yongnuo.com.cn/usermanual/downloadIndex.htm The functions of this manual are based on test conditions of our company. Further notice will not be given if the design and specifications change. The YONGNUO logo in this manual includes the registered trademark or trademark of SHENZHEN YONGNUO PHOTOGRAPHY EQUIPMENT Co., Ltd in China or/and other countries (regions). All other trademarks are the property of their respective owners.

-56-

X	YONGNUO DIGITAL	产品保修	卡	
	用户名称	联系电话	邮编	
	产品名称————	——————————————————————————————————————	Л	
		WARRANTY C	ARD	
	Owners Name	Phone	Zip Code	
			Date	



unit from the camera.





remove the control unit.

深圳市永诺摄影器材股份有限公司

TEL: (086) 0755-83762448 Email:service@hkyongnuo.com FAX: (086) 0755-83762765 Wedsite: www. hkyongnuo. com 全国服务热线: 400-001-3888 www.yongnuo.com.cn

深圳市坪山区坑梓街道深福保现代光学厂区A座